

Time and Date Setting

1. Pull crown out to position 2.
2. Rotate crown clockwise until the previous day's date is shown in the date window.
3. Pull crown out to position 3.
4. Rotate crown clockwise until the correct date is shown in the date window.
5. Continue to rotate crown to set correct analog time.

NOTE: 24-hour hand moves correspondingly with the hour and minute hands.

When setting the time be sure to check that the 24-hour hand is set properly.

6. Return crown to position 1.

NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

NOTE: Do not set the date between 9:00 PM and 1:00 AM to ensure accuracy.

Chronograph

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

Chronograph Zero Reset

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise.
Each press of A or B will move the chronograph hands by one increment/decrement. Or press and hold A or B for fast increments/decrements.
3. When both hands are in the zero position, reset time and return crown to position 1.

NOTE: Chronograph minute hand will synchronize with chronograph second hand during chronograph zero reset.

