

Calvin Klein

CALVIN KLEIN™ Watches
Operating Instructions, Care & Maintenance,
and Warranty & Service Information

Calvin Klein

Watches

Founded in 1968, the CALVIN KLEIN™ brand elevates everyday essentials to globally iconic status. CALVIN KLEIN™'s timepieces are all born from a singular point of view. Always sensual.

Contents

Operating Instructions

Timepieces

(1) 2 and 3 Hand Models.....	3
(2) 2 and 3 Hand with Date Models.....	4
(3) 2 and 3 Hand Automatic Models.....	5
(4) Multi-Eye Models (Type A).....	6
(5) Multi-Eye Models (Type B).....	7
(6) Swiss Made 2 and 3 Hand Models.....	9
(7) Swiss Made Chronograph Models (Type A).....	10
Care and Maintenance.....	12
Warranty and Service Information.....	13

Operating Instructions

(1) 2 and 3 Hand Models



Figure A

LEGEND

H – Hour hand

M – Minute Hand

S – Seconds Hand

1, 2 – Crown Positions

Crown Positions:

Position 1 – Normal position. Crown pushed against case.

Position 2 – To set time: Rotate crown in either direction

Operating Instructions

(2) 2 and 3 Hand with Date Models



Figure A

LEGEND

- H** – Hour hand
- M** – Minute Hand
- S** – Seconds Hand
- D** – Date Window

1, 2, 3 – Crown Positions

Crown Positions:

Position 1 – Normal position. Crown pushed against case.

Position 2 – To set date: Rotate crown clockwise.

Position 3 – To set time: Rotate crown in either direction

CAUTION: Never set the date when the hands are between 9:00 PM and 3:00 AM. Doing so could damage the calendar mechanism.

NOTE: The functioning of the watch is not affected during date setting. When the watch is running, the date will change gradually during the period from 9:00 PM to 3:00 AM.

Operating Instructions

(3) 2 and 3 Hand Automatic Models



Figure A

LEGEND

- H** – Hour hand
- M** – Minute Hand
- S** – Seconds Hand
- T** – 24 Hours Hand

1, 2 – Crown Positions

The motion of your arm during normal daily activities should be sufficient to keep your automatic watch wound. However, if you have not worn your watch for several days and it has stopped, you will need to wind the movement by hand before setting the time.

To Wind the Movement:

With the crown in position 1, flush against the case, turn the crown clockwise, completing approximately 15 to 20 revolutions to start the movement.

To Set the Time:

Once the watch is running, pull the crown out to position 2 and turn it in either direction to set hands to desired time, then push crown back in to position 1.

Note: The 24 hours hand is linked to the hour and minute hand and will move naturally with them.

Operating Instructions

(4) Multi-Eye Models – Type A



Figure A

LEGEND

- H** – Hour hand
- M** – Minute Hand
- W** – Day Indicator
- D** – Date Indicator
- T** – 24 Hour Indicator

1, 2, 3 – Crown Positions

Crown Positions:

- Position 1 – Normal position. Crown pushed against case.
- Position 2 – To set date: Rotate crown clockwise.
- Position 3 – To set time: Rotate crown in either direction

To set the day of the week, you must advance the hour hand by 24 hours to progress to indicator to the next day. Continue advancing until the indicator reaches the desired day of the week.

CAUTION: Never set the date when the hands are between 9:00 PM and 3:00 AM. Doing so could damage the calendar mechanism.

NOTE: The functioning of the watch is not affected during date setting. When the watch is running, the date will change gradually during the period from 9:00 PM to 3:00 AM.

Operating Instructions

(5) Multi-Eye Models – Type B



Figure A

LEGEND

- H – Hour hand
- M – Minute Hand
- S – Seconds Hand
- D – Day Indicator
- F – Date Indicator
- T – 24 Hour Indicator
- A – Pusher to set Day
- B – Pusher to set Date

1, 2 – Crown Positions

Crown Positions:

Position 1 – Normal position. Crown pushed against case.

Position 2 – To set time: Rotate crown in either direction

To set the day of week: With crown in position **1**, press and release button **A** until day of week hand **W** indicates desired day; hand will advance 1 day with each push.

To set the date: With crown in position **1**, press and release button **B** until Date hand **D** indicates desired date; hand will advance by 1 with each push.

CAUTION: Never set the date when the hands are between 9:00 PM and 3:00 AM. Doing so could damage the calendar mechanism.

NOTE: The functioning of the watch is not affected during date setting. When the watch is running, the date will change gradually during the period from 9:00 PM to 3:00 AM.

ck Calvin Klein

Swiss Made

Operating Instructions

(6) Swiss Made 2 and 3 Hand Models



Figure A

LEGEND

H – Hour hand
M – Minute Hand

1, 2 – Crown Positions

Crown Positions:

Position 1 – Normal position. Crown pushed against case.

Position 2 – To set time: Rotate crown in either direction

Operating Instructions

(7) Swiss Made Chronograph Models – Type A



Figure A

LEGEND

- H** – Hour hand
- M** – Minute Hand
- S** – Seconds Hand
- D** – Date Indicator
- W** – Day Indicator
- A** – Chronograph Start/Stop Button
- B** – Chronograph Reset Button
- C** – Chronograph Seconds Indicator
- E** – Chronograph Minute Indicator

1, 2, 3 – Crown Positions

Crown Positions:

Position 1 – Normal position. Crown pushed against case.

Position 2 – To set day and date.

Position 3 – To set time: Rotate crown in either direction

Setting the Date (Quick Mode)

Pull out the crown to position **2**. Turn the crown counterclockwise until the correct date appears in the date window. Push the crown back into position **1**.

Setting the Day of Week

Pull out the crown to position **3**. Turn the crown counterclockwise until yesterday's day of the week appears.

Push the crown to position **2** and turn the crown until yesterday's date appears. Pull out the crown to position **3** and turn the crown counterclockwise until the correct date and day of week are displayed. Continue to turn the crown counterclockwise until the correct time is displayed. Push crown back to position **1**.

CAUTION: Never set the date when the hands are between 9:00 PM and 3:00 AM. Doing so could damage the calendar mechanism.

NOTE: The functioning of the watch is not affected during date setting. When the watch is running, the date will change gradually during the period from 9:00 PM to 3:00 AM.

Operating Instructions

(7) Swiss Made Chronograph Models – Type A

Operating the Chronograph:

Basic Function

To start the chronograph, push button **A**. To stop timing, push button **A** again and read the chronograph counters **C** and **E**. To reset all chronograph hands to zero, push button **B**.

Accumulated Timing

Push button **A** once to start timing. Push button **A** again to stop the chronograph. Push button **A** a third time to resume timing.

Push button **A** one final time to stop the chronograph again. Push button **B** to reset the chronograph hands to their zero position.

Intermediate or Interval Timing

Push button **A** to start timing. Push button **B** to display time interval while timing continues in the background.

Push button **B** again to display the total measured time (the chronograph hands will quickly advance to the ongoing measured time). You can continue to push button **B** to display multiple intervals.

Press button **A** to stop the timing and display the final time. Press button **B** to reset the chronograph hands to their zero position.

Adjusting the Chronograph Hands to Zero Position

Pull out the crown to position **3**. Simultaneously push buttons **A** and **B** for at least 2 seconds. The second counter hand will rotate 360° and corrective mode will be activated. Return crown to position **1** once completed.

Care and Maintenance

Your CALVIN KLEIN™ watch has been developed with meticulous attention to quality, function, and detail. Please read the following information and instructions carefully to learn about the features, proper care, and operation of your new timepiece.

For additional information on service and repairs, please see the Service and Warranty section.

Shock

All our watches have shock-resistant movements and are tested to meet international standards for shock resistance.

Magnetism

The exposure of a timepiece to a strong magnetic field will affect its timekeeping and may cause it to stop. A quartz watch should resume working with its original accuracy when removed from the magnetic field; an automatic or hand-wound mechanical timepiece, however, may require demagnetization before it will operate again.

Water Resistance

All our watches are tested to meet international standards for water resistance to at least 3 bar (3 ATM / 30 M / 99 feet), so faucet spray or rain won't hurt them as long as the case, crown and crystal remain intact. Certain models are water resistant to even greater pressures and depths as marked on the dial or case back. Unless a watch is labeled as a diver's watch, we do not recommend wearing it while swimming, snorkeling, or scuba-diving.

CAUTION: Do not operate your watch crown or press the push-buttons on a chronograph or multi-function model when the watch is under water, or it will not remain water resistant.

NOTES: We recommend that you do not get your leather strap wet. Exposing leather to water can cause premature wear and deterioration.

Carefully wipe your watch using a soft cloth dampened with fresh water after exposure to chlorine or sea water.

Battery Information


Your quartz analog watch or chronograph has a battery specially designed for watches. It will last approximately 18-36 months under normal use.

NOTE: Frequent use of special functions, like the stopwatch timer on chronograph models, may shorten battery life.

End-of-life feature: The seconds hand on many models will start to move haltingly in 4-second increments when the battery is almost exhausted, signaling the need to have it replaced.

Battery replacement: Take or send your watch to an Authorized Service Center to have battery changed – your old battery will be disposed of/ recycled properly. Do not attempt to change the battery yourself.

Collection and treatment of end-of-life quartz watches*

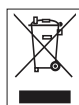

This product should not be discarded with household waste. To protect the environment and human health, it must be returned to a local authorized collection system for proper recycling.

*Valid in the EU member states and in any countries with corresponding legislation.

CALVIN KLEIN™ Watches

International Limited Warranty

CALVIN KLEIN™ Watches (CKW) warrants to the original consumer that, for a period of two (2) years from the date of purchase, their watch will be free from defects in materials and workmanship that prevent the watch from functioning properly under normal use.

Our responsibility for defects covered by this warranty is limited to repairing or (at the sole discretion of CKW) replacing the defective watch, free of charge.

This limited warranty does not cover analog batteries, straps, bracelets, crystals, gold- or ionic-plating or PVD finishing, cosmetic issues such as scratches or normal wear and tear, or any damage arising from accidents or misuse, or from any alteration, service or repair performed by any party other than a CKW Authorized Service Center.

This warranty is void if the timepiece was not purchased from an Authorized CKW Dealer, as evidenced by valid proof of purchase – a dated sales or gift receipt showing the name of the retailer and an identifying style number for the CALVIN KLEIN™ watch.

Any other warranty provided by the retailer is entirely their responsibility. No person or company is authorized to change the terms of this warranty. This warranty gives the consumer specific legal rights. Consumers may also have other statutory rights which may vary from state to state and country to country. However, to the extent not prohibited by law, this limited warranty is exclusive and in lieu of all other warranties, oral, written, statutory, express, or implied (including without limitation the warranties of merchantability and fitness for a particular purpose), all of which are expressly disclaimed.

Obtaining Service

Under Warranty

Should warranty service be required, pack your watch properly (see below) and send it along with (1) the original sales receipt and (2) a completed copy of the CALVIN KLEIN™ Watch Service Request Form from this file to the nearest CKW Service Center.

To find an Authorized Service Center in your region, click on the FIND AN AUTHORIZED WATCH REPAIR LOCATION link from the www.mgiservice.com/calvinklein homepage.

Out of Warranty

A CKW Service Center can also perform repairs not covered by the CKW warranty as well as service after the expiration of the warranty period.

Should your watch require parts or service not covered under the terms of your warranty, a written estimate will be sent for your approval and payment before the work is undertaken. Please use the form from this file.

Battery Replacement

The CKW Service Centers can also change the battery on your CALVIN KLEIN™ watch. Please use the form from this file.

Packing Your Watch

Pack your watch securely in padded wrapping materials for protection against shock. Be sure to include a completed copy of the CALVIN KLEIN™ Watch Service Request Form.

Insuring Your Watch

We recommend that you use registered mail and insure your watch for its full replacement value.

CALVIN KLEIN™ Watches

International Limited Warranty

Additional Instructions

Do not return a defective watch to the store from which it was purchased. Send it with a completed copy of the Service Request Form from this file to the nearest CKW Authorized Service Center.

Charges will be made for all repairs unless the original purchase receipt is returned with the product and repairs are covered under terms of warranty.

Warranty Information

International Limited Warranty

CALVIN KLEIN™ Watches International Service Request Form

Name _____

Address _____

City _____

State/Province/Region _____

Country _____

Postal Code _____

E-mail _____

Phone (_____) _____

Watch Model _____

What needs service, replacement or repair: _____
