



MESH BAND ADJUSTMENT INSTRUCTIONS

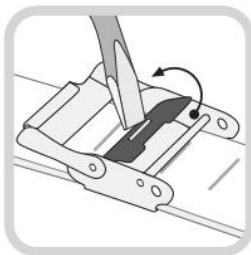

Lift

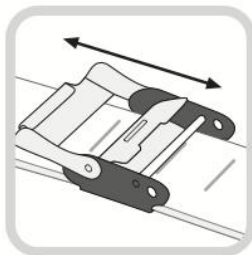


Shift




Press

TO ADJUST THE BAND: LIFT – SHIFT - PRESS


1. Position a flathead screwdriver or other adjustment tool in the slot on the clasp. Lift the bar in the direction facing away from the straight pin.
IMPORTANT: Ensure that the tool handle points toward the watch case. Pressing the adjustment tool against the straight pin may bend and destroy the pin.
2. Shift the adjustable buckle to the desired position. Clasp must be placed in one of the adjustment indentations on the back of the band.
3. Press the slotted clasp closed.

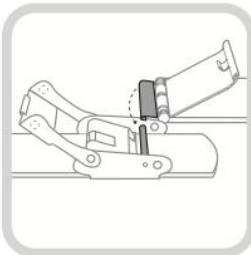

Hook

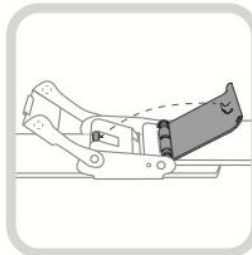

Snap

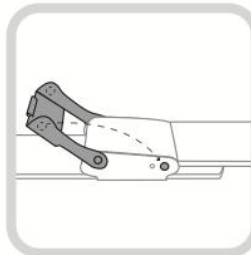

Clasp

TO SECURE THE BAND: HOOK – SNAP - CLASP

Pull the hook over the pin, snap the flat clasp closed, then close the security clasp.